



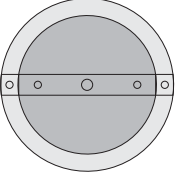


MOUNTING & INSTALLATION INSTRUCTIONS FOR STELLA WALL SCONE GOLD FOIL

SGW 1004

CONTENT LIST

<p>(A)</p>  <p>STELLA WALL SCONE-1 PC</p>	<p>(B)</p>  <p>SCREWS-2 PCS</p>	<p>(C)</p>  <p>DRY WALL ANCHOR-2 PCS</p>	<p>(D)</p>  <p>CANOPY & BACK PLATE-1 SET</p>
--	--	--	---

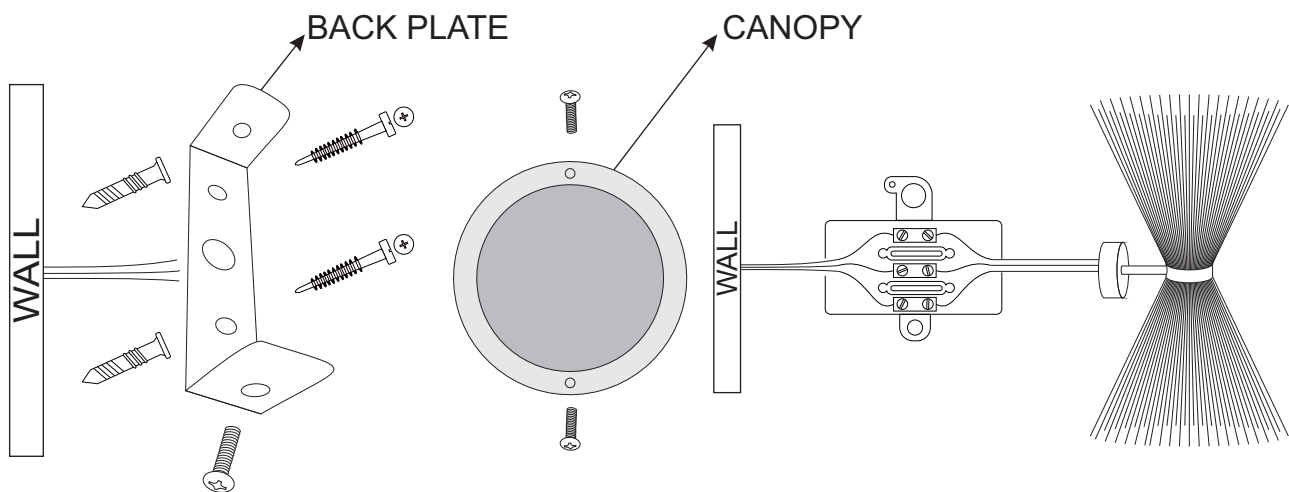

READ AND SAVE THESE INSTRUCTIONS

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

1. UNPACK ALL THE PARTS AND PLACE THEM ON PADDED SURFACE, DO NOT DISCARD PACKAGING MATERIAL THE ASSEMBLY IS COMPLETED.
2. MARK ONE HOLES LOCATION ON THE WALL AS DESIRED , DRILL THE HOLES WITH DRILL MACHINE (NOT INCLUDED). INSERT WALL ANCHORS INTO DRILLED HOLES, FIX THE SCREWS INTO WALL ANCHOR WITH A PHILIP'S HEAD SCREWDRIVER. KEEP THE SCREW HEAD 1" AWAY FROM THE WALL.
3. HANG THE SCONE ON THE WALL FOR USE.
4. SCREW THE NIPPLE TO THE CROSSBAR.
5. CONNECT THE BLUE WIRE OF FIXTURE TO BLUE WIRE FROM SUPPLY.
6. CONNECT THE BROWN WIRE OF FIXTURE TO BLUE WIRE FROM SUPPLY.
7. CONNECT THE GREEN EARTH WIRE OF FIXTURE TO BLUE WIRE FROM SUPPLY.
8. CONNECT THEM IN THE JUNCTION BOX ON SHOWN PICTURE ABOVE.
9. PUT THE BULBS INTO THE HOLDER.
10. RESTORE POWER, YOUR FIXTURE IS NOW READY FOR USE.